


## Perry Nut Propeller Zinc Anode Installation Instructions

- Make sure your boat anodes have proper physical and electrical connections.
- An anode with a poor electrical connection cannot provide corrosion protection.
- Clean the area where your anodes will be mounted by lightly sanding or wire brushing.
- Do not paint your anodes

(INSPECT PARTS BEFORE INSTALLING)

**STEP 1.** INSTALL PLAIN HEX NUT INTO HEX SIDE OF ZINC. NUT MUST BOTTOM ON BRASS WASHER AND BE AT LEAST 1/32" ABOVE ZINC, AS SHOWN IN SKETCH BELOW.

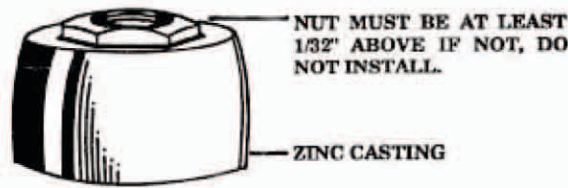

**STEP 2.** REMOVE NUT FROM ZINC, INSTALL NUT ON SHAFT AND TIGHTEN WITH WRENCH.

**STEP 3.** INSTALL ZINC WITH HEX SIDE OVER NUT.

**STEP 4.** INSTALL CASTELLATED NUT AND TIGHTEN WITH SOCKET WRENCH.

**STEP 5.** INSTALL COTTER PIN.

**STEP 6.** WHEN INSTALLATION IS COMPLETED, INSPECT TO MAKE SURE THAT ZINC DOES NOT BOTTOM ON PROP. YOU MUST BE ABLE TO SEE FIRST NUT THAT WAS INSTALLED.

